
## **Install Sheet**

## ZHM-20 // Wireless M-Bus Interface



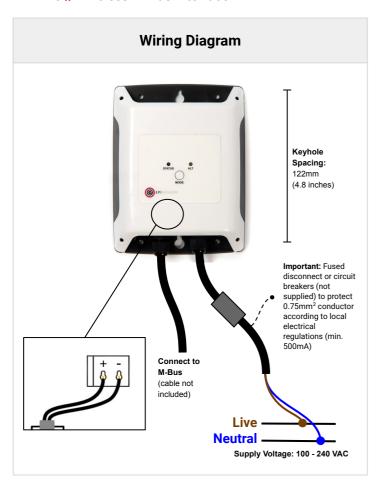

## **Installation & Safety Notes**



## HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH



- → EpiSensor equipment should be installed, operated, serviced and maintained only by qualified personnel. EpiSensor does not assume any responsibility for any consequences arising out of the use of this equipment.
- → NFVFR work alone.
- → Use appropriate personal protective equipment (PPE) and follow safe electrical work practices.
- → Turn off all power supplying the area in which the device is being installed before working on it.
- → Always use a properly rated voltage sensing device to confirm that all power is off.
- → The mains power supply is rated for up to 240 V AC. Consult the product datasheet for more information on safe operating conditions.
- → Clearly label the device's disconnect circuit mechanism and install it within easy reach of the operator.
- → The fuses / circuit breakers must be rated for the installation voltage and sized for the available fault current.