

ZGW-10 Quick Start Guide



Document Ref: ESE-264-00

Quick Setup for ZGW-10



1. Connect an Ethernet cable between your computer and the Ethernet port of the ZGW-10
2. Connect the included 12V power supply to Gateway's Power Connector
3. Ensure the Z32 USB device is plugged into USB3 (denoted as Z32 Port above)
4. Configure your computer Ethernet settings with a static IP address of **172.31.255.123** and a subnet mask of **255.255.255.0**
5. Connect to <http://172.31.255.1:8081/> using your web browser
6. Login with Username: **admin**, Password: **A1**
7. Go to Settings → System. Select '**Form New Network**' and Submit. Wait for 20 seconds.
8. Go to Settings → Add Nodes and enable '**allow join**' mode for 1 hour.
9. Power on any mains-powered nodes. Press and hold 'mode button' until LED flashes on battery-powered nodes.
10. If the nodes are in factory default condition, they will connect to the Gateway and appear in the nodes list.

Associated guides on how to set a static (fixed) IP Address are available for: [macOS](#), [Windows](#), [Linux](#)